



# TORQUE CONVERTER IMPELLERS

The power that is produced in the engine is multiplied in the torque converter and then transferred on to the transmission for use by the rest of the drive train components. CTP torque converters are a key component in doing so and in giving you more control over your machine's movements.

Application	Impeller Part No.	Torque Converter Part No.	Turbine Part No.
518	1T1691	1T1984	1T0020
637	1T0901	1T0910	1T0662
814	1T1051	1T1025	1T1053
815	1T0406	1T1984	1T0020
916	1T1447	1T1449	1T0079
920	1T0841	1T0855	1T0842
930	1T0851	1T0865	1T0020
936	1T1647	1T1503	1T0020
613C, 966C	1T1627	N/A	N/A
615C	8P0961	6T1882	8P0953
769C	1T0781	1T1424	1T0782
824/B, 825B, 826B	1T0771	1T0780	1T0782
834B	9W1566	9W1562	2P4470
926L, IT18B	1T1446	1T1448	1T0079
928F	1T1494	1T1949	1T1805
934B	3T5419	3T5227	2P4470
938F	1T1727	1T1950	1T1805
941, 951B/C	1T0018	1T0760	1T0020
950B	1T1438	1T1735	1T1480
950F, 960F	1T1840	1T1841, 1T1939	1T1053
955L	1T0724	1T1255	1T1480
960F	1T1953	1T1939	1T1053

Application	Impeller Part No.	Torque Converter Part No.	Turbine Part No.
962G, IT 38H	6Y1085	1163825	6Y3149
966D	8P0960	6T1169	8P0953
966D	8P0957	7T7883	8P0953
970F	8E9972	1447659	6Y1089
977K/L, 980B	1T0709	1T1010	1T0662
980C	6P6927	9W6273	2P5680
980F	9W6433	9W6273	N/A
980G, 980H	9W5278	1741411	2P5680
988B	9W1567	9W1564	N/A
988B-3408	3T5102	9W1564	2P5680
D3B, D5, D6C	1T0051	1T0930	1T1993
D4D	1T0022	1T1619	1T0020
D4H	1T0042	1T1440	1T0020
D5, D6H, 977H	1T1569	1T1787	1T0052
D5H	7T4754	7T4308	7T4754
D6M, 527, 938G, 966F	6Y1084	1463328	6Y3149
D8, D8H	1T0633	1T0670	1T0221
D8L, D9L, D9N	9P6476	9P4888	8P9265
D9H	1T1399	1T0611	1T0611
D9L, D10N, 988G	9P6477	9P7115	9P9265

\* Other part no. not included in the list are available. Please contact your sales representative if you have any questions. Part Numbers are used for reference purposes only.